

ATL INSTALLATION

SLINGSHOT

BEFORE YOU BEGIN:



You will need:


1. ATL Kit
2. Wingtip Battens
3. Bridle

If you require further assistance, email us or visit our website: www.sskiteboarding.com

Customer Service :

International: intl.service@sskites.comNorth America: usa.service@sskites.com

IN YOUR PACKAGE:

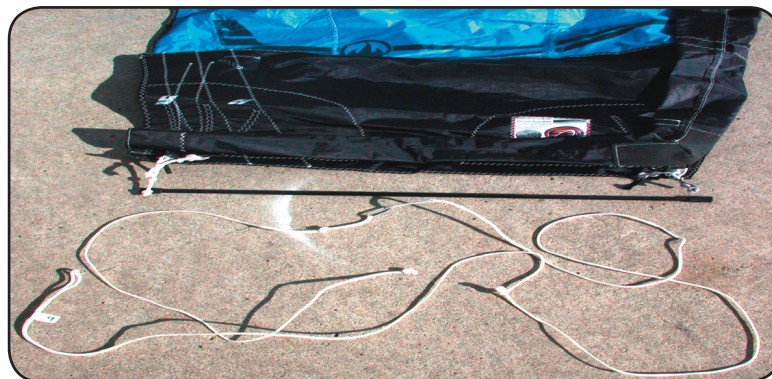

1. Unroll your kite and locate the wingtip.



2. You will first need to remove all pig-tails from the wingtip.



3. Now you must prepare the batten pockets for installation. Take the batten and pry open the rear/trailing edge pocket. This will make it easier to install the batten.



4. Insert the batten in the leading edge pocket.



5. Secure the wingtip by standing on the edges. Pull up on the middle of the batten while pushing down on the tip as shown in the picture. Guide the tip of the batten into the pocket and release pressure. The batten will slide into position. These are performance battens and are very stiff so be patient during installation.



6. Attach the bridle directly to webbing on kite wingtip by inserting the loop through the webbing on the LE.




7. Now take the other end of the bridle and feed it through the exposed loop. Pull tight forming a loop to loop connection.



8. Take the other end of the bridle and thread it up through the ring.



9. Across the wingtip and up through the trailing edge ring. *Make sure ATL bridle is between flap and ring.

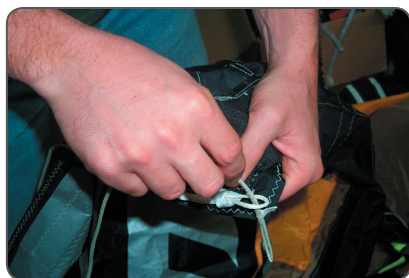



10. Pull the bridle through ring until the LE and the trailing edge are even.



12. Now you must attach the Leach line to the bridle.




13. Pull the leach line out of the pocket and form a larks head with the loop.




14. Slide the larks head over the bridle and slide it up to the knot located by the trailing edge ring.



15. Secure the larks head snugly beneath the knot as shown.

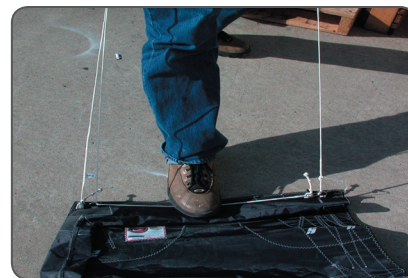

16. A properly install ATL System. Repeat for other wingtip.

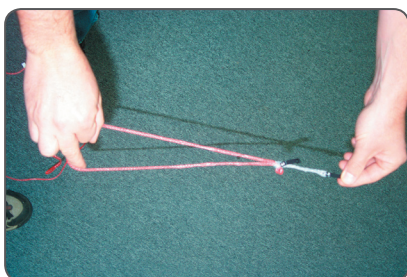

17. Finally make sure to re attach the kite pigtails to the bridle.